



Eminent print server compatibility list

Attention!

Not all brands and models are listed in this document. If your printer is not listed check the specifications of your printer. In most cases Host-based, GDI-based and CAPT-based printers do not work with a print server.

Brand	Model	Printserver		
		EM4470	EM4473	EM4472
Avision	MF 3200		•	•
Avision	MF 3230		•	•
Brother	HL1260	•		•
Brother	MFC4800	•	•	•
Brother	MFC4800J	•	•	•
Brother	MFC6800	•	•	•
Brother	MFC7220	•	•	•
Brother	MFC7420	•	•	•
Brother	MFC8840D	•	•	•
Brother	MFC210C		•	•
Brother	IntelliFax 2820		•	•
CANON	S520	•		•
CANON	S200SPX		•	•
CANON	I450		•	•
CANON	I550		•	•
CANON	I850		•	•
CANON	I950		•	•
CANON	I255		•	•
CANON	I355		•	•
CANON	I455		•	•
CANON	I470D		•	•
CANON	I475D		•	•
CANON	I560		•	•
CANON	I850		•	•
CANON	I865		•	•
CANON	I905D			•
CANON	I6100	•	•	•

CANON	I6500	•	•	•
CANON	I9100		•	•
CANON	I9950		•	•
CANON	IX4000		•	•
CANON	IX5000		•	•
CANON	Imageclass D380		•	
CANON	BJ-330	•		•
CANON	BJC-620			•
CANON	BJC4200	•		•
CANON	BJC4300	•		•
CANON	BJC4550	•		•
CANON	BJC4650	•		•
CANON	BJF9000		•	•
CANON	PIXMA ip1000		•	•
CANON	PIXMA ip2000		•	•
CANON	PIXMA ip3000		•	•
CANON	PIXMA ip4000	•	•	•
CANON	PIXMA ip4200		•	•
CANON	PIXMA ip5000		•	•
CANON	PIXMA ip6000		•	•
CANON	PIXMA ip8500		•	•
CANON	MP-110		•	•
CANON	MP-130		•	•
CANON	MP730		•	•
CANON	MP770		•	•
Citizen	GSX230	•		•
DATAMAX	I-4208	•		•
DATAMAX	I-4308	•		•
DOCUJET	1610F	•	•	•
DOCUJET	UA1610	•	•	•
EPSON	Aculaser C3800		•	
EPSON	Aculaser C9100		•	
EPSON	C750	•	•	•
EPSON	CX 1500		•	•
EPSON	LQ-100	•		•
EPSON	LQ-300	•		•

EPSON	LQ-300+	•		•
EPSON	LQ-300+II	•	•	•
EPSON	LQ-570C	•		•
EPSON	LQ-1000C	•		•
EPSON	LQ-1170+	•		•
EPSON	LQ-1170C+	•		•
EPSON	LQ-1170C	•		•
EPSON	LQ-2070C	•		•
EPSON	LQ-2080C	•		•
EPSON	LQ-2090	•		•
EPSON	LQ-2090C	•	•	•
EPSON	LQ-2170C	•		•
EPSON	LQ-2180C	•		•
EPSON	LQ-2550	•		•
EPSON	LQ-3500C	•		•
EPSON	LQ-670	•		•
EPSON	LQ-680	•		•
EPSON	LQ-680C	•		•
EPSON	PictureMate PM250		•	
EPSON	STYLUS C20		•	•
EPSON	STYLUS C40		•	•
EPSON	STYLUS C41UX		•	•
EPSON	STYLUS C43UX		•	•
EPSON	STYLUS C45		•	•
EPSON	STYLUS C59		•	
EPSON	STYLUS C60	•	•	•
EPSON	Stylus C63	•	•	•
EPSON	Stylus C67	•	•	•
EPSON	Stylus C79		•	
EPSON	Stylus C83	•		•
EPSON	Stylus C90		•	
EPSON	Stylus Color 400	•		•
EPSON	Stylus Color 600	•		•
EPSON	Stylus Color 670	•	•	•
EPSON	Stylus Color 800	•	•	•
EPSON	Stylus Color 810	•	•	•

EPSON	Stylus Color 850	•	•	•
EPSON	Stylus Color 900		•	•
EPSON	Stylus Color 1160		•	•
EPSON	Stylus Color 1520		•	•
EPSON	Stylus CX-1500		•	•
EPSON	Stylus CX-2900		•	•
EPSON	Stylus CX-3500		•	•
EPSON	Stylus CX-3700		•	•
EPSON	Stylus CX-3900		•	•
EPSON	Stylus CX-4100		•	•
EPSON	Stylus CX-4700		•	•
EPSON	Stylus CX-4900		•	•
EPSON	Stylus CX-5300		•	•
EPSON	Stylus CX-5900		•	•
EPSON	Stylus CX-6900F		•	•
EPSON	Stylus CX-7800		•	•
EPSON	Stylus Pro 7600	•	•	•
EPSON	Stylus Photo 915		•	•
EPSON	Stylus Photo 1270	•	•	•
EPSON	Stylus Photo 1290		•	•
EPSON	Stylus Photo 1390		•	
EPSON	Stylus Photo 2100		•	•
EPSON	Stylus Photo 710		•	•
EPSON	Stylus Photo 720		•	•
EPSON	Stylus Photo 790		•	•
EPSON	Stylus Photo 810	•	•	•
EPSON	Stylus Photo 830U		•	•
EPSON	Stylus Photo 900	•	•	•
EPSON	Stylus Photo 915		•	•
EPSON	Stylus Photo EX2	•	•	•
EPSON	Stylus Photo EX3	•	•	•
EPSON	Stylus Photo R1800	•	•	•
EPSON	Stylus Photo R210		•	•
EPSON	Stylus Photo R230		•	•
EPSON	Stylus Photo R250		•	•
EPSON	Stylus Photo R270		•	•

EPSON	Stylus Photo R310		•	•
EPSON	Stylus Photo R350		•	•
EPSON	Stylus Photo R2400		•	•
EPSON	Stylus Photo RX 430		•	•
EPSON	Stylus Photo RX 510		•	•
EPSON	Stylus Photo RX 530		•	•
EPSON	Stylus Photo RX 590		•	•
EPSON	Stylus Photo RX 630		•	•
EPSON	Stylus Photo RX 650		•	•
EPSON	ACULASER C1900	•	•	•
EPSON	EPL5700	•		•
EPSON	EPL5800	•	•	•
EPSON	EPL5900	•	•	•
EPSON	EPL6100	•	•	•
EPSON	EPL6200	•	•	•
EPSON	EPL-N2120	•		•
EPSON	LP2500		•	•
EPSON	LP8900		•	•
EPSON	TM T88III	•		•
FUJITSU	DL-700	•		•
FUJITSU	DL-900	•		•
FUJITSU	DL-3400	•		•
FUJITSU	DL-3800	•		•
FUJITSU	DL-3850	•		•
FUJITSU	DL-5800	•		•
FUJITSU	DL-6400Pro	•		•
FUJITSU	DL-6800	•		•
FUJITSU	FP 410	•		•
FUJITSU	Jet Wind 500C	•		•
FUJITSU	PP 10	•		•
FUTEK	F8000	•		•
FUTEK	F84+	•		•

FUTEK	F86+	•		•
HP	Color Laserjet 2605	•	•	•
HP	Color Laserjet 2700N		•	•
HP	Color Laserjet 3700	•	•	•
HP	DeskJet 400	•		•
HP	DeskJet 450C	•	•	•
HP	DeskJet 500	•		•
HP	DeskJet 670C	•		•
HP	DeskJet 680C	•		•
HP	DeskJet 720C	•		•
HP	DeskJet 810C	•	•	•
HP	DeskJet 830C	•	•	•
HP	DeskJet 845C		•	•
HP	DeskJet 920C	•		•
HP	DeskJet 930C	•		•
HP	DeskJet 948C	•	•	•
HP	DeskJet 970CXI	•	•	•
HP	DeskJet 1120C	•		•
HP	DeskJet 1125C	•	•	•
HP	DeskJet 1180C	•	•	•
HP	DeskJet 1220C		•	•
HP	DeskJet 1280	•	•	•
HP	DeskJet 3325		•	•
HP	DeskJet 3420		•	•
HP	DeskJet 3535		•	•
HP	DeskJet 3743		•	•
HP	DeskJet 3748		•	•
HP	DeskJet 3650		•	•
HP	DeskJet 3820	•	•	•
HP	DeskJet 3920		•	•
HP	DeskJet 3940		•	•
HP	DeskJet 5440		•	•
HP	DeskJet 5500	•		•
HP	DeskJet 5550	•	•	•
HP	DeskJet 5652	•	•	•
HP	DeskJet 9300	•	•	•

HP	DeskJet 9600	•	•	•
HP	DeskJet 9650	•	•	•
HP	DeskJet 9800	•	•	•
HP	Business Inkjet 1000		•	•
HP	Designjet 100	•	•	•
HP	Designjet 600	•		•
HP	Designjet 650C	•		•
HP	Designjet 700	•		•
HP	Designjet 750C+	•		•
HP	LaserJet 1022		•	•
HP	LaserJet 1022N		•	•
HP	LaserJet 1100	•		•
HP	LaserJet 1160	•	•	•
HP	LaserJet 1200	•	•	•
HP	LaserJet 1220	•	•	•
HP	LaserJet 1300	•	•	•
HP	LaserJet 1320	•	•	•
HP	LaserJet 2100	•		•
HP	LaserJet 2200	•		•
HP	LaserJet 2200D	•	•	•
HP	LaserJet 2300	•	•	•
HP	LaserJet 2410	•	•	•
HP	LaserJet 2420	•	•	•
HP	LaserJet 2500	•	•	•
HP	LaserJet 2550	•	•	•
HP	LaserJet 3015	•		•
HP	LaserJet 3050		•	•
HP	LaserJet 3020		•	
HP	LaserJet 3200	•	•	•
HP	LaserJet 3330	•	•	•
HP	LaserJet 3380		•	•
HP	LaserJet 4000	•		•
HP	LaserJet 4050	•		•
HP	LaserJet 4100	•		•
HP	LasetJet 4250	•	•	•
HP	LasetJet 4300	•	•	•

HP	LaserJet 4500	•		•
HP	LasetJet 4650	•	•	•
HP	LasetJet 5000	•	•	•
HP	LasetJet 5000LE	•		•
HP	LasetJet 5100LE	•		•
HP	LaserJet 6P	•		•
HP	LaserJet 8100	•		•
HP	LaserJet 1005 MFP		•	•
HP	Photosmart 2610		•	•
HP	Photosmart 7150		•	•
HP	Photosmart 7550		•	•
HP	Photosmart 7830		•	•
HP	Photosmart C3180		•	•
HP	Photosmart D5160		•	•
HP	Photosmart D7160		•	•
HP	PSC 1315		•	•
HP	PSC 1350		•	•
HP	PSC 1410		•	•
HP	PSC 1610		•	•
HP	PSC 2210		•	•
HP	PSC 2310		•	•
HP	OfficeJet 4255		•	•
HP	OfficeJet 5510		•	•
HP	OfficeJet 5610		•	•
HP	OfficeJet 6210		•	•
HP	OfficeJet 7210		•	•
HP	OfficeJet K850	•	•	•
HP	OfficeJet Pro K5300		•	•
HP	OfficeJet Pro K550		•	•
IBM	Infoprint 20	•		•
IBM	Infoprint 1116	•	•	•
IBM	Infoprint 1312	•	•	•
IBM	Infoprint 1316	•	•	•
IBM	Infoprint 1332	•	•	•
IBM	Infoprint 1412	•	•	•
Konica Minolta	DI 152	•		•

Konica Minolta	DI 250	•		•
Konica Minolta	Pagepro 1300W	•	•	•
Konica Minolta	Pagepro 1350W	•	•	•
Konica Minolta	Pagepro 1380MF		•	•
Konica Minolta	Pagepro 9100		•	•
Konica Minolta	Magicolor 2400		•	•
Konica Minolta	Magicolor 2450	•	•	•
Konica Minolta	Magicolor 5450	•	•	•
Konica Minolta	Magicolor 7300		•	•
Kyocera	FS-1010	•	•	•
Kyocera	FS-1010KX		•	•
Kyocera	FS-1020	•	•	•
Kyocera	FS-1920	•	•	•
Kyocera	FS-720	•	•	•
Kyocera	FS-820	•	•	•
Kyocera	FS-920	•	•	•
Kyocera	FS-6020	•	•	•
Kyocera	KM-1635		•	•
LEXMARK	E210	•	•	•
LEXMARK	E322	•	•	•
LEXMARK	Opra S1250	•		•
LEXMARK	T420	•	•	•
LEXMARK	T620	•	•	•
LEXMARK	C720	•		•
LEXMARK	C750	•	•	•
LEXMARK	W812	•	•	•
LEXMARK	Z43	•	•	•
LEXMARK	Z45		•	•
LEXMARK	Z55	•	•	•
LEXMARK	Z615		•	•
LEXMARK	Z705	•	•	•
LEXMARK	Z42		•	•
LEXMARK	Z515	•	•	•
LEXMARK	X6170		•	•
MITAC	MP-6600C	•		•
NEC	Pinwriter P2200	•		•
NEC	Pinwriter P3200	•		•

NEC	Pinwriter P5300	•		•
NEC	PINWRITER P8000C	•		•
OKI	Microline 391	•		•
OKI	C3200		•	•
OKI	B4350	•	•	•
RICOH	NF3570	•		•
PANASONIC	KX-P1121	•		•
PANASONIC	KX-P1123	•		•
PANASONIC	KX-P1124	•		•
PANASONIC	KX-P1624	•		•
PANASONIC	KX-P6500	•		•
SAMSUNG	ML-1520		•	•
SAMSUNG	ML-1710	•	•	•
SAMSUNG	ML-1750	•	•	•
SAMSUNG	ML-2010		•	
SAMSUNG	ML-2250	•	•	•
SAMSUNG	ML-2550	•	•	•
SAMSUNG	CLP 500	•	•	•
SAMSUNG	CLP 510	•	•	•
SAMSUNG	SRP 270	•		•
SAMSUNG	SCX-4016	•	•	•
SAMSUNG	SCX-4100	•	•	•
Sharp	AR-255	•		•
Sharp	AR-265FG	•		•
Sharp	AR-M 160	•	•	•
Sharp	AR-M 205	•	•	•
Sharp	AR-M 207	•	•	•
Sharp	AR-M 235	•	•	•
Sharp	AR-M 275	•	•	•
Sharp	AR-M 350	•	•	•
Sharp	AR-M 351U		•	•
Sharp	AR-M 400	•	•	•
Sharp	AR-M 450	•	•	•
STAR	NX-2420	•		•
TOSHIBA	E-161	•		•
TOSHIBA	Estudio-25	•		•

XEROX	Phaser 3310	•	•	•
XEROX	Able 3321	•		•
XEROX	Docuprint 240A	•	•	•